


The ToTeM Wall Arm can hold any lamp from the ToTeM collection. Please read them thoroughly before installation.

To Te M Care Instructions


The polymer that's covering the To Te M shades can be best cleaned using a regular dry feather duster, vacuum it gently, or wipe it with a wet cloth.

Attention: Lamp assembly and electrical work should be carried out by a qualified electrician.

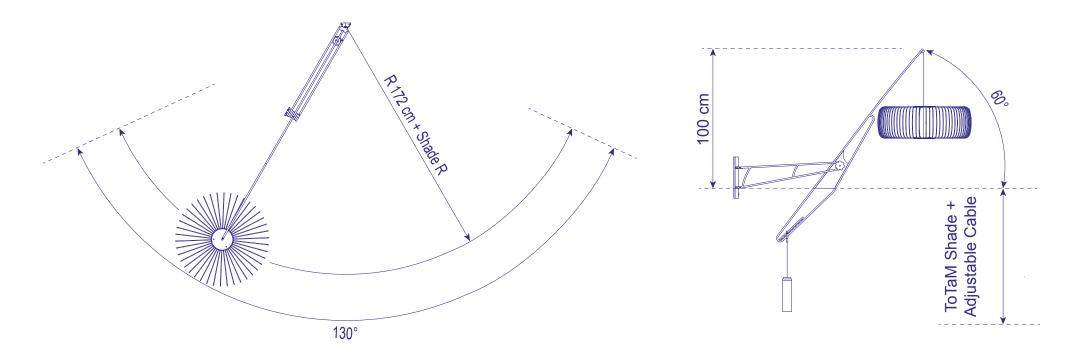

To Te M Arm




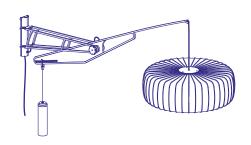


May 2020





Fix the Hanger using the supplied bolt as shown

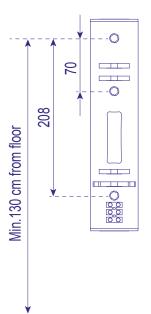




 \bigcirc Fix the Arm by using supplied bolt as shown.

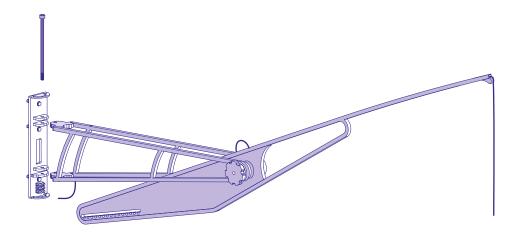


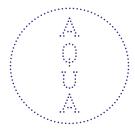




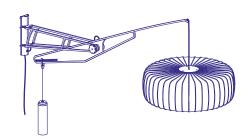


Thread the elect. core through the silicon button and connect it to terminal block as shown

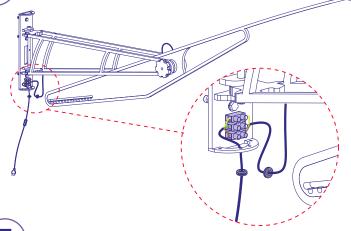


Fix the other side of the hanger covers by using supplied bolt as shown. Push the silicone button in to it's designed holes.

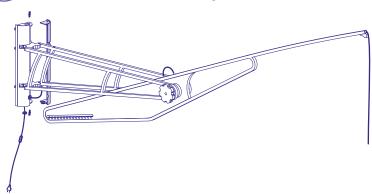


Fix one side of the hanger covers by using supplied bolt as shown.

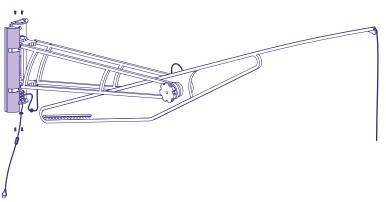


Connect the weight holder as shown.

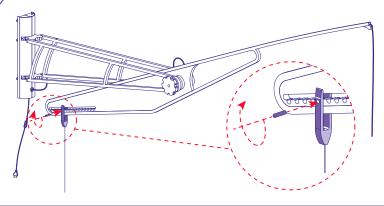

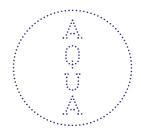



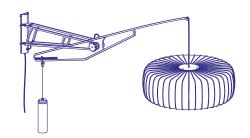




Remove the shade out of its pack carefully, DO NOT USE A KNIFE. You should hold the shade sade safely at its center top and bottom black rings; make sure it is the upright position by looking for the "TOP" and "BOTTOM" marking on the rings.




Hang the shade to the top cover with the 3 supplied thumb screws and close the bottom cover.





Connect the electrical male quick connector to the female connector coming from the inside of the shade.

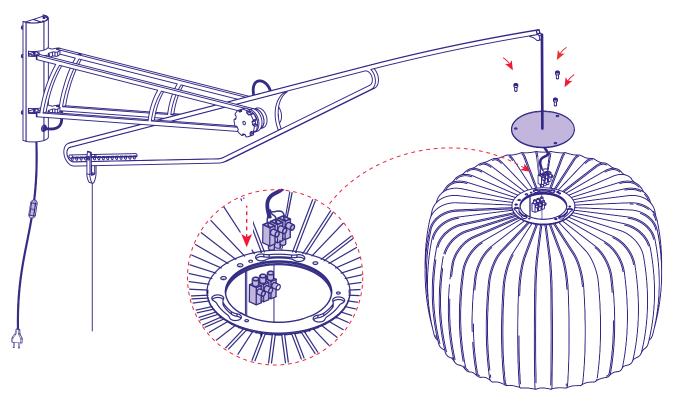

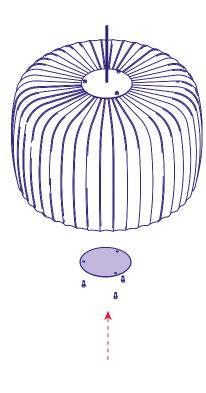

To Te M Arm

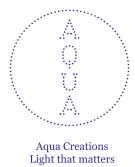

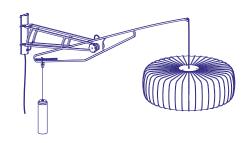

May 2020



Carefully, hang the balancing weight on the stainless steel. For fine balancing, lift and drag the weight back or forward

